ECS Pre-Engineered Nitrogen Generator







For use under U.S. Patents 8,720,591, 9,144,700 and 9,186,533

## **Specifications**

**Dimensions:** 32" (W) x 57" (H) x 40" (D)

813mm (W) x 1,448 (H) x 1,016mm (D)

**Weight:** 425 Lbs (193 Kg)

**Temperature Range:**  $40^{\circ}\text{F} - 105^{\circ}\text{F} (5^{\circ}\text{C} - 40^{\circ}\text{C})$ 

**Compressor Power Supply:** PGEN-20 - 480VAC/3 phase/60Hz (Standard)

PGEN-20 - 208VAC/3 phase/60Hz (Optional)

PGEN-20E - 400VAC/3 phase/50Hz

Dedicated circuit for the 2 hp compressor

**Power Consumption:** 480VAC/3 phase/60Hz - 6 Amps

208VAC/3 phase/60Hz - 9 Amps (400VAC/3 phase/50Hz - 12 Amps)

Generator Power Supply: 120VAC/1 phase/60Hz (dedicated circuit)

220-240VAC/1 phase/50Hz (dedicated circuit)

**Power Consumption:** 2 Amps

Nitrogen/Air Connection: ½" NPT Female
Drain Connection: ½" NPT Male
Approvals: FM Approved
CE Certified

UL508A Listed Industrial Control Panel

## **Ordering Information**

Stock Number: PGEN-20(E)

**Replacement Filters:** PGEN-FKS-F (annual maintenance) **Gas Membrane:** PGEN-MS (20 year expected service life)

#### **General Description**

The ECS Pre-Engineered Skid Mount Nitrogen Generator is designed to facilitate the **Dry Pipe Nitrogen Inerting** (**DPNI**) process for controlling oxygen corrosion in dry pipe and preaction fire sprinkler systems with supervisory nitrogen maintenance gas. The nitrogen generator can be used in **cold storage/freezer applications** due to added benefit of ice plug mitigation. With plug and play performance in a typical dry pipe or preaction fire sprinkler system, the nitrogen generator utilizes membrane separation technology that produces 98%+ nitrogen gas on demand.

The ECS Nitrogen Generator supplies single or multiple sprinkler systems depending on the number of systems, the volume of the largest system, and the cumulative volume of all systems being supplied. The generator includes an integral air compressor and external bypass valve for maintenance or for "fast fill" needs to meet the NFPA 13 30-minute fill requirement for dry pipe and preaction fire protection systems. Cold storage application requirements vary based on the temperature of refrigerated space - contact ECS for design assistance.

The ECS Nitrogen Generator is designed to inert the supervised sprinkler system within 14 days and then automatically provide nitrogen gas for pressure maintenance. When paired with either the Protector Dry Manual Vent (PAV-D) or the Protector Dry SMART Vent (PSV-D/DE) **installed on the sprinkler riser**, the nitrogen generator facilitates the patented "fill and purge" breathing process to **remove all the corrosive oxygen gas** in the sprinkler systems **without the need for nitrogen storage**.

ECS Pre-Engineered Nitrogen Generator



# The ECS Pre-Engineered Nitrogen Generator is a self-contained skid mounted unit that includes the following components:

- 2 hp air compressor power supply
  - 480VAC/3 phase/60Hz (400VAC/3 phase/50Hz) Standard
  - 208VAC/3 phase/60Hz Optional
- Oil less air compressor with after cooler
- 20 gallon horizontal air receiver tank with automatic condensate blow down ½" NPT Male
- Steel enclosure cabinet with membrane type nitrogen generator (no nitrogen gas storage) and manual bypass
- Power supply 120VAC/1 phase/60Hz (220-240VAC/1 phase/50Hz)
- Single point nitrogen/air discharge ½" NPT Female
- Hour run meter and cycle counter

#### The ECS Nitrogen Generator includes the following function Indications:

- Bypass Alarm Nitrogen generator is in the "By-Pass" mode (Flashing Indicator)
- Leak Monitoring Nitrogen generator running excessively (Audible Signal)

#### The ECS Nitrogen Generator includes the following monitoring outputs:

- System Power (Digital Output)
- Bypass Mode Alarm (Digital Output)
- Nitrogen Generator Running (Digital Output)
- Leak Monitoring (Digital Output)
- Nitrogen Supply Line Pressure (Analog Output)

# The ECS Nitrogen Generator is designed to be used in conjunction with the following components as part of the complete ECS Dry Pipe Nitrogen Inerting (DPNI) system:

 Air maintenance device with on board adjustable regulator (recommend Victaulic Series 757; Tyco AMD-1 or; Reliable Model A)

**NOTE:** The air maintenance device is not required when the PGEN-3 or PGEN-5 is connected to a single dry pipe or pre-action sprinkler system.

Riser-mounted ECS Protector Manual Vent (PAV-D) or ECS Protector Dry SMART Vent (PSV-D/DE)

### The ECS Nitrogen Generator can be used with the following optional equipment:

- ECS Protector SMART Gas Analyzer (SGA-1) one per nitrogen generator is recommended
- ECS In-Line Corrosion Detector (ILD-X) monitoring at least one per sprinkler system is recommended

### Operating Performance

Model Number	Min. Supply Air SCFM (L/min)	Total System Capacity Gallons (Liters)	Single System Capacity † @ 40 psig (2.8 bar) Gallons (Liters)	Single System Capacity † @ 20 psig (1.4 bar) Gallons (Liters)	Sound Level dBA @ 10'
PGEN-20/(20E)	10 (283)	3,200 (12,113)	950 (3,596)	1,800 (6,814)	74

<sup>†</sup> Capacity based on NFPA 13 30-minute fill requirement of largest single system

#### **Nitrogen Quality**

N<sub>2</sub> Purity at Discharge: 98% or greater (maximum of 2.0% oxygen)

N<sub>2</sub> Pressure at Discharge: Min of 15 psig (1 bar); Max of feed air pressure minus 15 psig (1 bar)

N<sub>2</sub> Water Dew Point: Typically less than -70°F (-57°C)

#### NOTE:

When connecting an ECS Protector Nitrogen Generator to an existing dry pipe/preaction fire sprinkler system, the existing fire sprinkler system(s) must be limited to a maximum leak rate of less than 6 psig (.4 bar) within a 24 hour period, per system.

R

ECS Pre-Engineered Nitrogen Generator



#### **Installation Instructions**

Installation of the ECS Protector Nitrogen Generator requires five (5) steps:


- 1. Mount the ECS Nitrogen Generator skid to the floor in the appropriate location within the riser room
- 2. Connect the two (2) dedicated power supply circuits in the power supply cabinet on the skid
- 3. Plumb the nitrogen/air supply line to the water based fire sprinkler risers being served
- 4. Plumb the condensate drain line to floor drain or building exterior
- 5. Connect Nitrogen generator output signals to BMS or fire alarm system, where applicable

#### Step 1: Mounting the Skid

The ECS Nitrogen Generator is designed to be mounted directly to the floor in the fire sprinkler riser room. Several factors should be considered in choosing the proper mounting location for the nitrogen generator:

- Access to the power supply (dedicated circuits)
- Access to the sprinkler risers being supplied from the nitrogen generator
- Access to a drain for the condensate discharge line
- Clearance at the front of the unit to open the cabinet door
- Clearance from the side of the unit to access the power box

The skid base comes with pre-punched holes in the skid feet for easy mounting to the floor using standard anchors. The anchors can be tightened through the pre-punched access holes located at the corners of the skid.

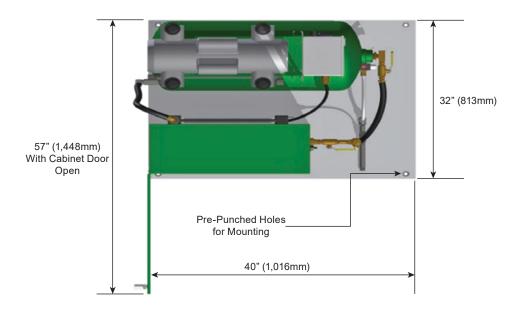

#### **Step 2: Power Supply**

The nitrogen generator requires two dedicated power supply circuits. Both circuits connect to the terminal blocks inside the power supply box.

1. 2 hp compressor power supply 480VAC/3 phase/60Hz dedicated 20 amp circuit (Standard)


208VAC/3 phase/60Hz dedicated 20 amp circuit (Optional) (400VAC/3 phase/50Hz dedicated 20 amp circuit)

2. Nitrogen generator power supply 120VAC/1 phase/60Hz dedicated 20 amp circuit

(220-240VAC/1 phase/50Hz dedicated 20 amp circuit)

ECS Pre-Engineered Nitrogen Generator



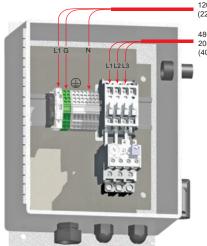

120VAC/1 Phase 60Hz Connections (220-240VAC/1 Phase 50Hz Connections)

480VAC/3 phase/60Hz Connections 208VAC/3 phase/60Hz Connections (400VAC/3 phase/50Hz Connections)

#### NOTE:

When providing 208VAC/3 phase/60Hz to the control box, verify the compressor and the motor starter have been reconfigured for operating at 208VAC/3 phase/60Hz

### Step 3: Plumb the Nitrogen/Air Supply Line

The nitrogen/air discharge plumbing from the ECS Protector Nitrogen Generator is to be connected directly to the sprinkler system valve trim using ½" to 1" black steel, galvanized steel, or copper piping. The size of the nitrogen/air supply line shall be based on both the length of pipe between the nitrogen generator and fire sprinkler systems and the total volume of fire sprinkler systems being supplied. The nitrogen generator requires an in-line Air Maintenance Device (AMD) that is equipped with an on board field adjust able pressure regulator for each zone being served. The preferred AMD is the Victaulic Series 757.

**NOTE:** When both dry pipe and preaction fire sprinkler systems are connected to one nitrogen generator, additional equipment may be required if the fire sprinkler systems operate at different supervisory gas pressures.

#### **Step 4: Plumb the Condensate Drain Line**

The ECS Protector Nitrogen Generator will occasionally discharge a small amount of condensate water from the coalescing filters inside the cabinet and the air compressor tank. It is recommended that the  $\frac{1}{2}$ " drain connection be plumbed to a floor drain or building exterior. When plumbing to a drain is not feasible an evaporative collection chamber can be used.

#### Step 5: System Signals and Monitoring, where used

The nitrogen generator cabinet has two (2) system signals and five (5) outputs that can be monitored by the facility's BMS or fire alarm system.


- Bypass Alarm The nitrogen generator is operating in the bypass mode which is activated when the bypass valve is in the "fast fill" position to fast fill the fire sprinkler system and the air supplied directly from the air compressor has reached a pressure of 20 psig (1.4 bar).
   (Flashing amber light)
- Leak Monitor The nitrogen generator is equipped with a leak monitor audible signal which is activated when the nitrogen generator runs excessively. (Audible signal)

The nitrogen generator cabinet includes system monitoring signals which can be monitored through a building monitoring system, if desired:

- Nitrogen Generator Running Form C contacts
- Bypass Mode Alarm Form C contacts
- Nitrogen Generator Power Monitoring Form C contacts
- Leak Monitoring Form C contacts
- Nitrogen System Supply Line Pressure Analog Signal

ECS Pre-Engineered Nitrogen Generator



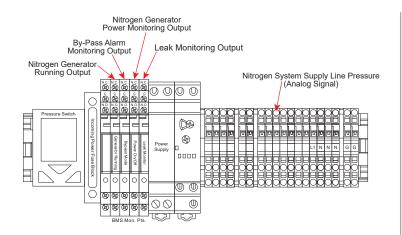

## **ECS Pre-Engineered Nitrogen Generation System**

(typical installation schematic)

ECS Protector Dry Pipe Venting Device

Nitrogen/Air Supply Line

Dry Pipe/Preaction System Control Valve

Nitrogen Generator

#### **Maintenance of the Nitrogen Generator:**


The nitrogen generator cabinet contains three (3) separate cartridge filters and a water separator. It is recommended that each of the filter cartridges be replaced as part of an annual preventative maintenance program. In some environments it may be necessary to replace filters more frequently. The filter replacement kit for the nitrogen generator is part number PGEN-FKS-F. When maintained properly the nitrogen separation membrane will provide up to 20 years of service life.

### **Filter Replacement Procedure**

Preliminary Steps (taking the nitrogen generator out of service)

- 1. Turn the power supply to the unit off
- 2. Close the inlet and outlet ball valves, and open the bypass ball valve
- 3. Depressurize the nitrogen generator internal inlet piping by slowly opening the depressurization valve in the cabinet to the left of the filter housing

To replace the filter cartridges follow Step 1 through Step 7.

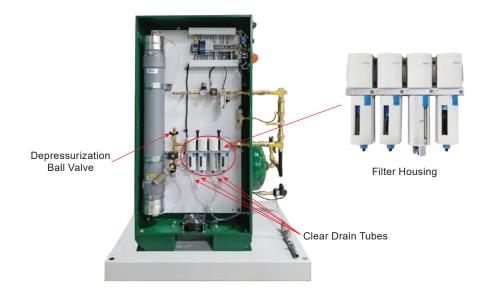

ECS Pre-Engineered Nitrogen Generator



- **Step 1:** Remove the filter housing by pulling down on the blue housing lock and turning the filter housing counter-clock wise.
- **Step 2:** Once the filter housing has been removed, the filter cartridge inside is removed by first unscrewing the black retaining disc at the base of the cartridge and then pulling down on the cartridge. Discard the old filter cartridge and replace it with the appropriately marked filter cartridge from the filter replacement kit by pushing up so that it fits snugly onto the receiving cylinder in the upper part of the filter housing. Screw the black retaining disc back onto the threaded rod.

Important: HAND TIGHTEN ONLY!



- **Step 3:** Replace the filter housing by pushing up into position and turning housing clockwise until blue housing lock latches into place.
- **Step 4:** Repeat Step 1 through Step 3 for each additional filter. (**NOTE:** Filters 2 & 3 do not have a black retaining disc, filters screw directly into housing)
- Step 5: Remove water separator housing and inspect water separator. Clean as necessary
- Step 6: Close the depressurization ball valve.
- Step 7: The ECS Protector Nitrogen Generator can now be placed back into service.

#### **Return the Nitrogen Generator to Service**

- 1. Turn the power supply to the unit on
- 2. Open the inlet and outlet ball valves, and close the bypass valve on the bypass loop.
- 3. Check inside the nitrogen generator cabinet for leaks using a soap water solution. Tighten fittings where needed.

#### **ECS Protector Nitrogen Generator Optional Monitoring Equipment**

- ECS Protector Handheld Gas Analyzer (PHGA-1): portable handheld gas analyzer includes one-button calibration and enables user to measure nitrogen concentration at nitrogen generator cabinet or gas sampling ports on ECS oxygen removal vents.
- ECS Protector SMART Gas Analyzer (SGA-1): permanently installed near an ECS Protector Manual/ SMART Vent to continuously report nitrogen gas concentration to a building information or management system; includes digital display and provides 0-5V DC or 4-20mA output signals.
- ECS In-Line Corrosion Detector (ILD-X): installed in-line within the fire sprinkler system piping at locations most susceptible to corrosion; provides either a local push-button test/indicator or control panel monitoring.