# AG-2000/3500(E)







#### **Features**

ECS AdvancedIQ Nitrogen Generator (U.S. Patents 8,720,591, 9,144,700 and 9,186,533)

- Interactive LCD touchscreen display
- · Electronic bypass with alarm indication and sleep mode
- · Programmable audible alarm
- · Optional remote monitoring and email alerts

Isolation ball valve included

Up to 3500 gallons of total sprinkler system capacity

No nitrogen storage tank

Optional freestanding installation kit

Contains cULus Listed Open Type Industrial Control Panel

Meets Canadian Standard CSA C22.2 No. 14-13



#### **General Description**

The ECS Advanced IQ Wall Mount Nitrogen Generator is designed to facilitate the Dry Pipe Nitrogen Inerting (DPNI) process for controlling oxygen corrosion in dry pipe and preaction fire sprinkler systems. The nitrogen generator utilizes membrane separation technology that produces 98%+ nitrogen gas. The nitrogen generator can be used in cold storage/freezer applications due to the added benefit of ice plug mitigation. Cold storage application requirements vary based on the temperature of refrigerated space, contact ECS for design assistance.

The AdvancedIQ HMI display screen allows for easy operation and complete control of the nitrogen generator as well as the ability to communicate with the nitrogen generator from anywhere in the world. Access to nitrogen generator operation, maintenance, diagnostics and stored historical data is easily obtained through the HMI screen on the nitrogen generator or remotely through the internet.

The nitrogen generator supplies single or multiple sprinkler systems depending on the number of systems, the volume of the largest system, and the cumulative volume of all systems being supplied. The integral air compressor and bypass valve allows for maintenance or "fast fill" needs to meet the NFPA 13 30-minute fill requirement.

The nitrogen generator is designed to inert the supervised sprinkler systems within 14 days and then automatically provide nitrogen gas for pressure maintenance. When paired with either the Standard Vent (PAV-D/DQ) or the SMART Vent (PSV-D/DE) installed on the sprinkler riser, the nitrogen generator facilitates our patented "fill and purge" breathing process to remove all the corrosive oxygen gas in the sprinkler systems without the need for a nitrogen storage tank.

#### **Maintenance**

Nitrogen generators require limited maintenance; however, it is advisable to routinely check the generator to ensure functionality. Improper maintenance can potentially damage/shorten the service life of the nitrogen generator and/or air compressor. See owner's manual for required maintenance procedures.

## **Specifications**

Cabinet Dimensions	28.5" (W) x 39.5" (H) x 11.5" (D)			
Weight	AG-2000 (208 Lbs), AG-3500 (220 Lbs)			
Power Supply Available In (dedicated circuit)	200-240VAC/1 phase/50-60Hz			
Power Consumption	10 Amps			
Nitrogen/Air Connection	½" NPT Female			
Drain Connection	1/4" NPT Female			
Temperature Range	40°F - 105°F (5°C - 40°C)			
Replacement Filters	FKWM-FS (annual maintenance)			

## **Operating Performance**

Model Number	AG-2000††	AG-3500 <sup>††</sup>	
Total System Capacity	2,000	3,500	
Gallons (Liters)	(7,571)	(13,249)	
Single System Capacity <sup>†</sup> @ 40 psig (2.8 bar)	800	800	
Gallons (Liters)	(3,028)	(3,028)	
Single System Capacity <sup>†</sup> @ 20 psig (1.4 bar)	1,800	1,800	
Gallons (Liters)	(6,815)	(6,815)	
Sound Level dBA @ 10'	70	70	
Compressor Horsepower	2.0	2.0	

<sup>†</sup> Capacity based on NFPA 13 30-minute fill requirement of largest single system †† Nitrogen production is less than 5.5 ft³/min (160 L/min) at 10 psi (0.7 bar) as defined in NFPA 13


#### Installation


The ECS Nitrogen Generator is designed to be mounted directly to the wall at the installation location inside the riser room. Allow access to the front of the cabinet for service and place the unit in a location near fire sprinkler system connections, a drain, and a dedicated electrical connection. Allow for clearance around vents on side and bottom for proper cabinet ventilation. Install included isolation ball valve on the outlet of the cabinet. For detailed installation and operation please refer to the ECS AdvancedIQ Nitrogen Generator Manual.

# AG-2000/3500(E) ECS AdvancedIQ Nitrogen Generator



# **Wiring Diagrams**

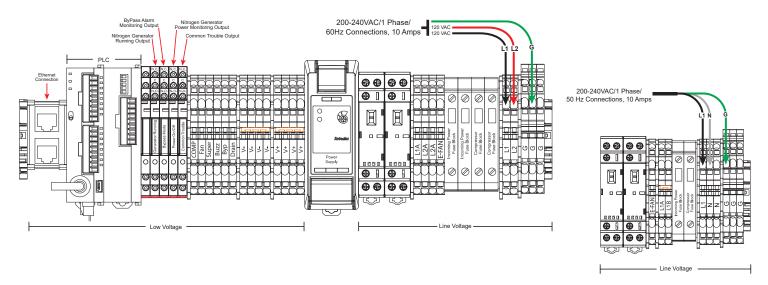

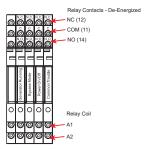

Description	Normally Open Contact Connections (Building Alarm System)			Normally Closed Contact Connection (Building Management System)		
	Relay	LED	Connections	Relay	LED	Connections
Nitrogen Generator Running Output (Running)	Energized	ON	11 & 14	Energized	ON	11 & 12
Bypass Alarm Monitoring Output	De-Energized	OFF	11 & 14	De-Energized	OFF	11 & 12
Nitrogen Generator Power Monitoring Output	Energized	ON	11 & 12	Energized	ON	11 & 14
Common Trouble Monitoring Output	De-Energized	OFF	11 & 14	De-Energized	OFF	11 & 12

#### **Cabinet Dimensions**

